




Art. 8725.03 Tapse afsmelter voor dinerkaarsen

Apparaat om dinerkaarsen te voorzien van een tapse onderzijde.

Vermogen: 40 watt

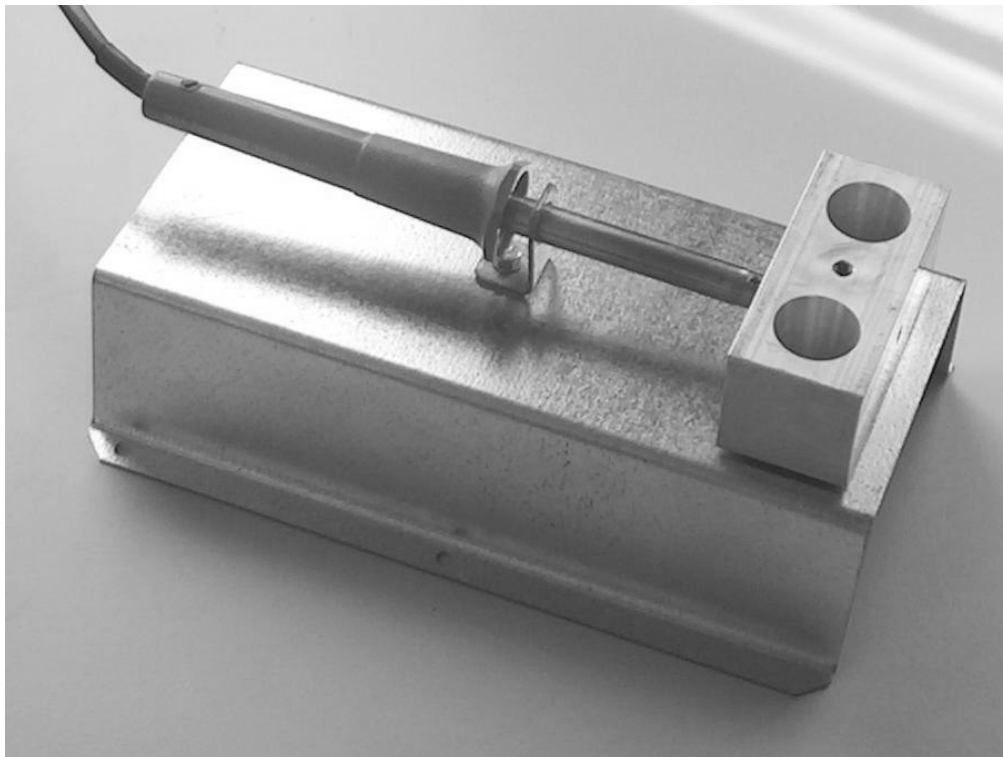


Gebruiksaanwijzing:

- Plaats de afsmelter op een stevige ondergrond in een droge omgeving.
- Plaats een opvangbakje onder de uitloop.
- Steek de stekker in een geaard stopcontact en het apparaat begint te verhitten.
- Na ca. een half uur is het apparaat voldoende verhit voor gebruik.
- Steek de dinerkaarsen in de tapse afsmelter en smelt het gewenste uiteinde aan de kaars.
- Na het afsmelten de stekker weer uit het stopcontact halen en deze laten afkoelen.
- Het apparaat is eenvoudig te reinigen met keukenpapier wanneer deze nog warm is.
- Het apparaat nooit met water in contact brengen!



Art. 8725.03 Tapering melter for dinner candles
Device to give dinner candles a tapered bottom.
Power: 40 watts.

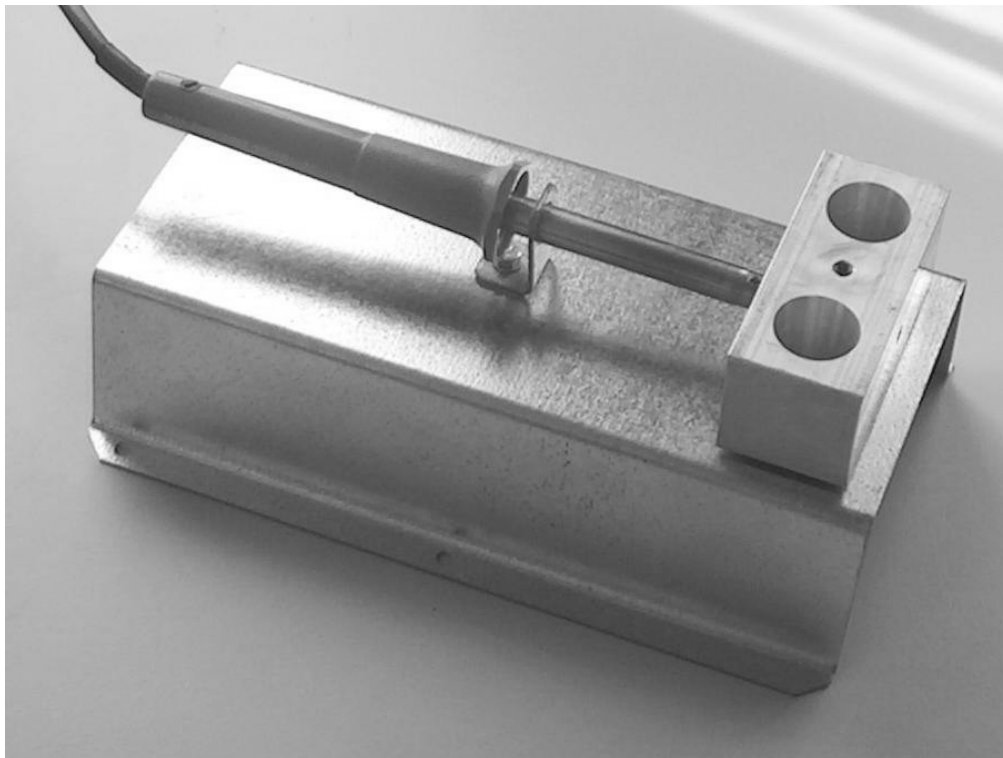

Instructions for Use:

- Place the melter on a sturdy surface in a dry environment.
- Place a collection tray under the outlet.
- Plug the device into a grounded socket, and it will start heating.
- After approximately half an hour, the device will be sufficiently heated for use.
- Insert the dinner candles into the tapered melter and melt the desired end of the candle.
- After melting, unplug the device and allow it to cool.
- The device is easy to clean with kitchen paper while still warm.
- Never bring the device into contact with water!